

QUICK-START GUIDE

NUMARK MIXTRACK PRO

serato



Installation and Setup

The Numark Mixtrack Pro is a class compliant USB plug and play device and requires no further driver installation.


NOTE: Please ensure you have the latest available drivers AND firmware updates, which may be required in order to be compatible with Serato DJ. Please go to <http://serato.com/dj/support>

1. Download and install the latest version of Serato DJ from <http://serato.com/dj/downloads>
2. Connect your Pioneer DDJ-S1 to an available USB Port.
3. Open Serato DJ.
4. The Mixtrack Pro platters require a few touches by the user in order to calibrate to their environment. Tap the platters a few times to set their sensitivity.

NOTE: You will need to connect your Mixtrack Pro RCA output 1 to your sound system/speaker setup. Output 2 is an output of the CUE, which you can use for monitoring.

Serato DJ Activation

To find out how to activate Serato DJ by either starting your free 14 day trial, or purchasing a license for Serato DJ, [click here](#) for the most up to date information.

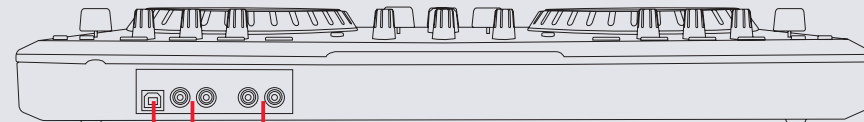


Insert USB from computer here

Output 2 outputs the cue. This is useful for monitoring

Main RCA output. Connect this to speakers/stereo setup

serato



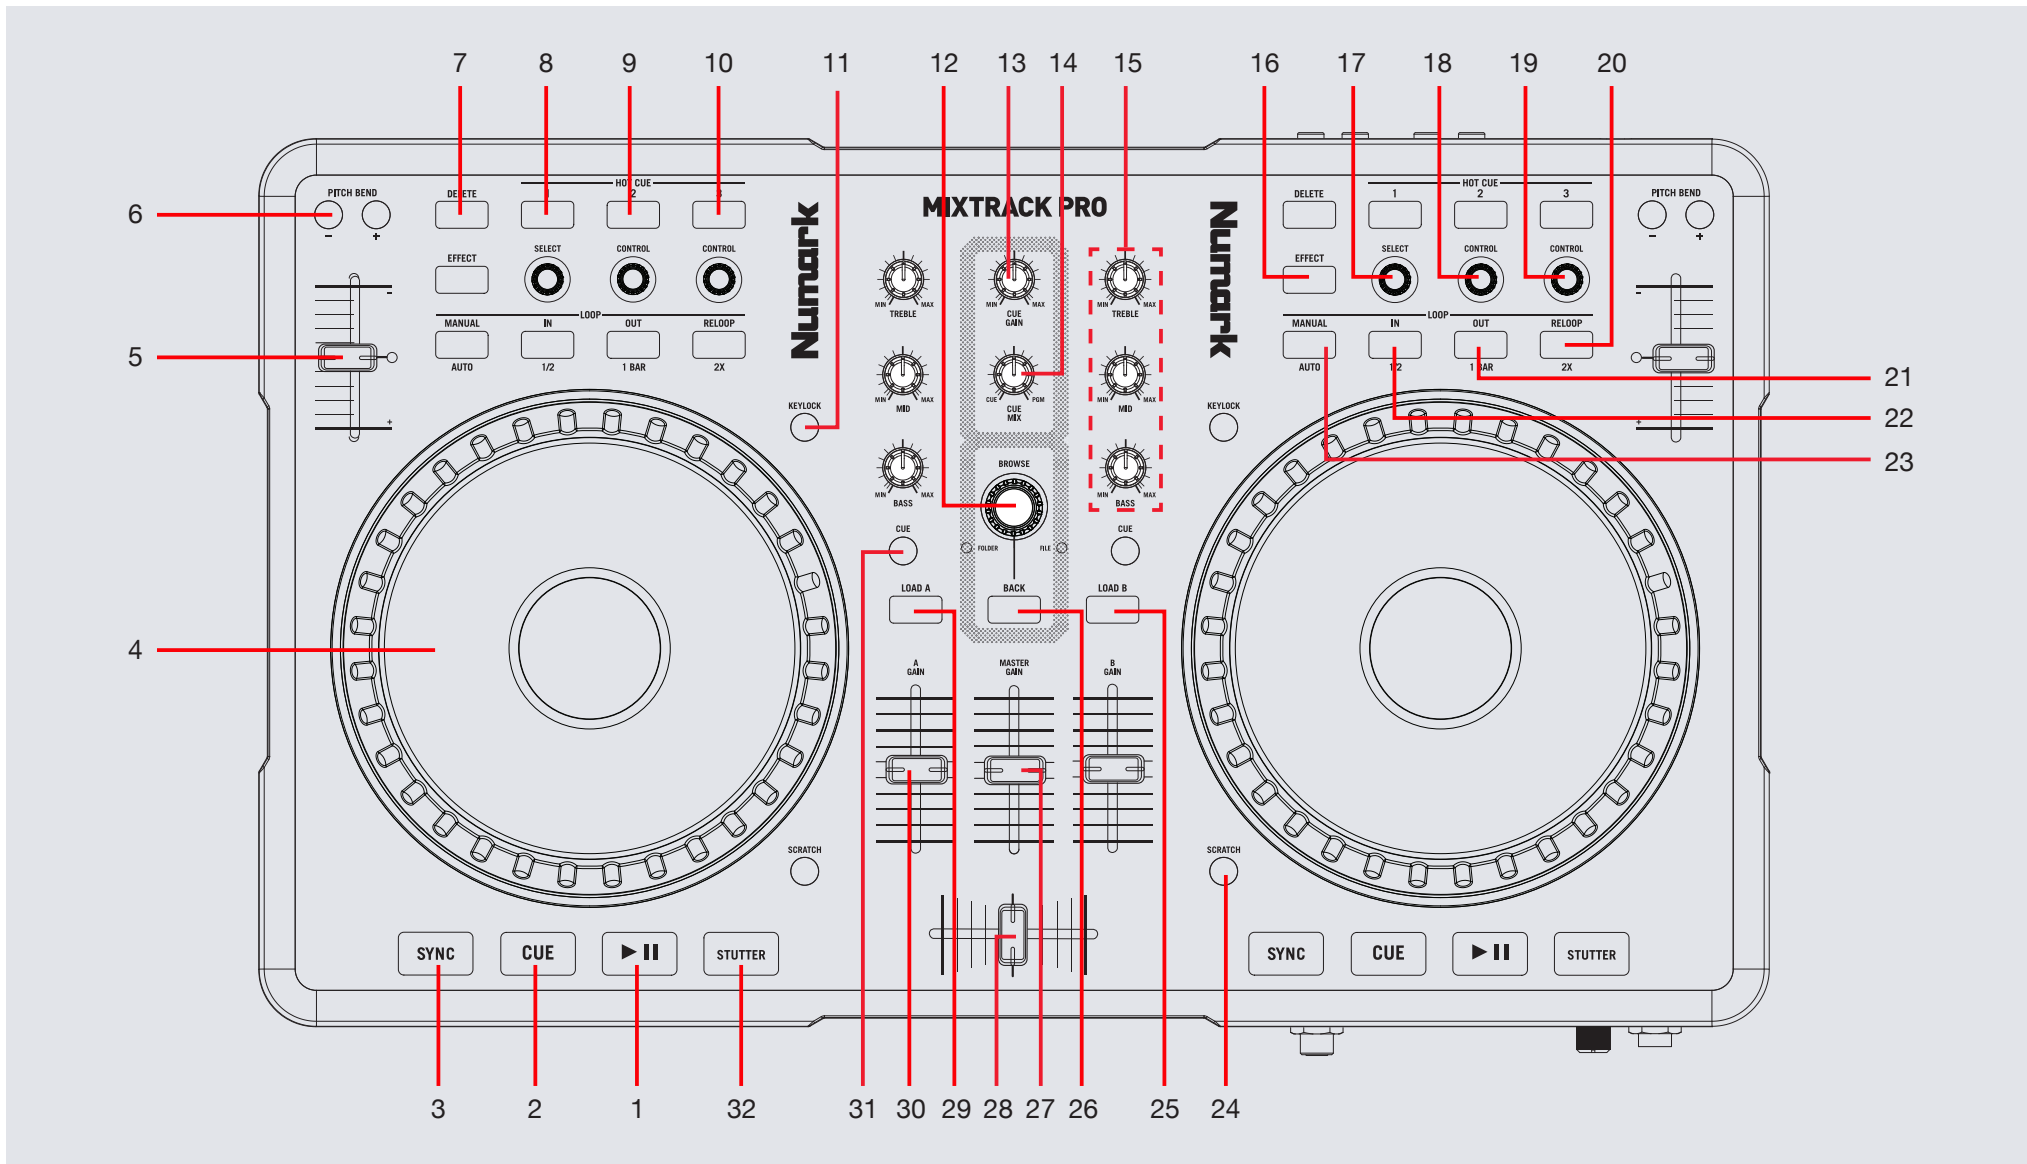

Note: View/Delete button is now SHIFT when used in conjunction with other controls.


#	Mixtrack Pro Control	Serato DJ Function	Shift Function
1	PLAY/PAUSE	Play/Pause	
2	CUE	Temp Cue	
3	SYNC	Sync On	Sync Off (Press twice to return to Absolute Pitch when in Relative Mode)
4	PLATTER	Adjust/Scratch or Jog	Beat Skip
5	TEMPO FADER	Adjust Tempo	When in Sync mode, used to disable the Pitch Fader temporarily and change the zero position
6	PITCH BEND +/-	Pitch Bend Up, Pitch Bend down	
7	VIEW/DELETE	Added Shift functionality is applied when used in conjunction with other controls	
8	CUE1	Set/Trigger CUE 1	Delete Cue 1
9	CUE2	Set/Trigger CUE 2	Delete Cue 2
10	CUE3	Set/Trigger CUE 3	Delete Cue 3
11	KEYLOCK	Keylock On/Off	Cycle through available Tempo Range
12	BROWSE	Browse Library/Click to Navigate forward	
13	CUE GAIN	Adjust Cue Output	
14	CUE MIX	Adjust Mix between Cue and Master	
15	EQ	Adjust Channel EQ's	
16	EFFECT	Slot 1 On/Off	Slot 2 On/Off
17	SELECT (Knob)	Adjust Beats Multiplier/ Tap to the desired FX tempo. To return to AUTO mode, press and hold.	Slot 3 On/Off
18	CONTROL 1 (Knob)	Adjust Slot 1 Parameter	Select Effect in Slot 1
19	CONTROL 2 (Knob)	Adjust Slot 2 Parameter	Select Effect in Slot 2
20	RELOOP	SEE LOOPING SECTION FOR MORE INFORMATION	
21	OUT	SEE LOOPING SECTION FOR MORE INFORMATION	

serato



22	IN	SEE LOOPING SECTION FOR MORE INFORMATION
23	MANUAL/AUTO	Toggle between Manual and Auto Loop Modes
24	SCRATCH	Toggle between Scratch Mode On/Off for jog wheel
25	LOAD B	Load track to Deck B
26	BACK	Toggle between Crates and Library
27	MASTER GAIN	Adjust Master Output
29	LOAD A	Load track to Deck A
30	GAIN A	Adjust Channel gain
31	CUE	Cue selected channel in headphones
32	STUTTER	Stutter Play

DJ-FX

The DJ-FX in Serato DJ are powered by iZotope™. Click the FX tab  to open the FX panel. Select either 1, 2 or M to assign the selected effect bank to a deck or Master Output. To activate an effect, click the ON button on your FX UNIT in the software, or the EFFECT button on your controller. You can adjust effect parameters by using either software controls, or the SELECT/CONTROL knobs and the EFFECT button on the controller.

Mixtrack Pro Control	Single FX Mode	Shift
EFFECT (Button)	Effect On/Off	Adjust FX Parameter 2
SELECT (Knob Twist)	Adjust Beats Multiplier	Select Effect
SELECT (Knob Click)	Tap to the desired FX tempo. To return to AUTO mode, press and hold	Adjust Parameter 4
CONTROL 1 (Knob)	Adjust FX Parameter 1	
CONTROL 2 (Knob)	Adjust FX Parameter 3	Adjust FX Parameter 5
VIEW/DELETE (Shift) + Effect (Button)	FX Button 1	
VIEW/DELETE (Shift) + Select (Press Knob Down)	FX Button 2	

Mixtrack Pro Control	Multi FX Mode	Shift
EFFECT (Button)	Slot 1 On/Off	Slot 2 On/Off
SELECT (Knob Twist)	Adjust Beats Multiplier	
SELECT (Knob Click)	Tap to the desired FX tempo. To return to AUTO mode, press and hold	Slot 3 On/Off
CONTROL 1 (Knob)	Adjust Slot 1 Parameter	Select Effect in Slot 1
CONTROL 2 (Knob)	Adjust Slot 2 Parameter	Select Effect in Slot 2

The effect time is set using the tracks BPM value, but by applying the Beats Multiplier you can increase or decrease the effect timing. Modify this by using the SELECT knob on the controller. Automatic tempo requires that the track on the deck assigned to the FX Unit has BPM information. Manual tempo mode allows you to tap in the tempo yourself.

Looping

You have the choice of Auto or Manual Looping within Serato DJ with the Numark Mixtrack Pro.

NOTE You can also save a loop to the next available free loop slot in the software. To do this, click **+** on an available loop slot. Your loops are saved to the file and recalled the next time it is loaded. They are not lost if the file is moved or renamed.

Mixtrack Pro Control	Manual Loop Mode
Loop IN	Set loop in point (Loop not active)
Loop IN	Adjust loop in point (Loop active)
Loop OUT	Set loop out point (If loop in point is set)
Loop OUT	Adjust loop out point (Loop active)
Reloop	Exit Loop (Loop Active)
Reloop	Reloop (Loop not active)

NOTE: The best way to edit the in and out points of a loop is with the jog wheel/platter on your Mixtrack Pro.

Mixtrack Pro Control	Auto Loop Mode
1 Bar	Auto Loop ON/OFF
1/2	Halve Auto Loop Length
2X	Double Auto Loop Length

NOTE You can also save a loop to the next available free loop slot in the software. To do this, either click the **☐** button in the manual/auto loop tab or click **+** on an available loop slot. Your loops are saved to the file and recalled the next time it is loaded. They are not lost if the file is moved or renamed.

 
MIDI

The MIDI feature in Serato DJ provides the ability to remap Serato DJ software functions to your primary Serato DJ controller, interface or mixer. You can also assign controls to a secondary MIDI controller to further enhance your performance.

[For more information on MIDI mapping with Serato DJ click here.](#)

To remap your supported Serato DJ device, open the **SETUP** screen and click the **MIDI** tab. If your Serato DJ device supports hardware remapping it will show up in the **MIDI Devices** list at the top.

Select your connected device from the MIDI Devices list and make sure the "Allow Serato Hardware Remapping" option is checked.



Once checked, the MIDI assign button at the top of the screen will become available for you to start remapping.





You can save, edit or delete MIDI presets in the **MIDI** tab of the **SETUP** screen. Clicking '**Restore Defaults**' will erase any custom mappings for all connected devices and revert their functions back to default.

[Download the Serato DJ software manual for further information.](#)

NOTE: Official Serato Accessories do not currently support user remapping. Hardware features that cannot be remapped at this stage are Jogwheels/Platters, Input Switches, Shift buttons and Performance Pad Mode buttons. Re-mapping any pad(s) in Hot Cue mode will also re-map the same pad in Saved Flip mode and vice versa.

Using the Tool Tips

Click on the  icon to enable Tool Tips. This is located in between the MIDI and setup button in the top right hand corner of the screen. Tool Tips provide a handy way to learn the various features of Serato DJ.

Move the mouse over a section of the screen to bring up a context sensitive tool tip. Holding the mouse over the  button with Tool Tips turned on will show you a list of all keyboard shortcuts.

For more information about how to use Serato DJ, please go to our website www.serato.com or refer to the Serato DJ Software Manual. For more information on your controller, please refer to the hardware manual.

For further help, please contact support@serato.com or go to www.serato.com/dj/support

serato

