

**QUICK-START
GUIDE
NUMARK
MIXTRACK
PLATINUM**

serato



DJ

Installation and Setup

The Numark Mixtrack Platinum is a class compliant USB plug and play device and requires no further driver installation.

1. Download and install the latest version of Serato DJ from <http://serato.com/dj/downloads>
2. Connect your Numark Mixtrack Platinum to an available USB Port.
3. Open Serato DJ.


Serato DJ Activation

To find out how to activate Serato DJ by either starting your free 14 day trial, or purchasing a license for Serato DJ, [click here](#) for the most up to date information.

serato



Controller

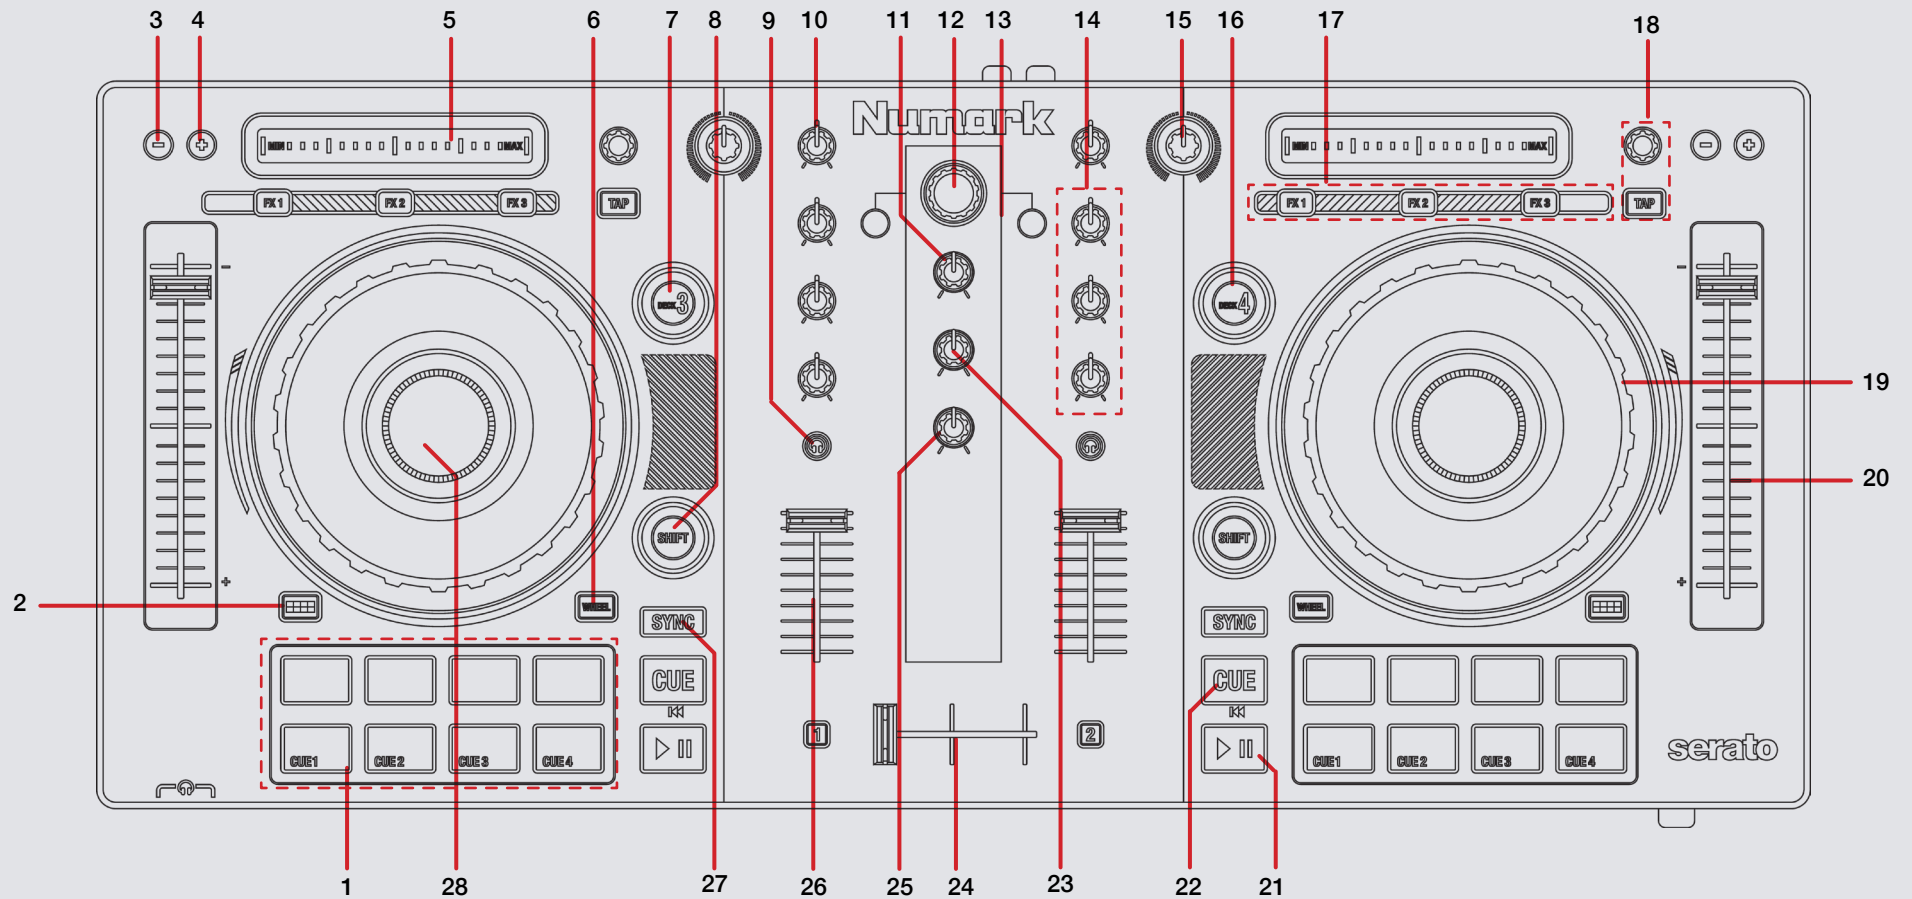


NOTE: The SHIFT button is used with other buttons that have shift modifier functions.

#	Mixtrack Platinum	Serato DJ Function	Shift
1	PERFORMANCE PADS	SEE PERFORMANCE PAD SECTION FOR MORE INFORMATION	
2	PAD MODE	Change Performance Pad mode	
3	PITCH BEND -	Pitch bend backward	
4	PITCH BEND +	Pitch bend foreward	
5	TOUCH STRIP	Adjust FX parameter	Skip search through track
6	SCRATCH	Turn Scratch mode on for the platters	
7	DECK 3	Change to DECK 3 on the left platter	
8	SHIFT	Used with other controls that have shift modifier functions	
9	PFL CUE	Enable to monitor the channel through the headphones	
10	CHANNEL GAIN	Adjust channel gain	
11	MASTER GAIN	Adjust master output gain	
12	BROWSE	Scroll to browse library or crate lists. Push to go Back	
13	LOAD DECK	Load currently highlighted track to respective deck	
14	CHANNEL EQ	Adjust channel EQ	
15	HP/LP FILTER	Channel HP/LP filter	
16	DECK 4	Change to DECK 4 on the right platter	
17	FX 1-3	FX 1-3 On/Off. Adjust parameters in Single FX mode.	FX select
18	BEATS MULTIPLIER	Adjust beats multiplier timing. Tap tempo.	
19	PLATTER	Adjust currently loaded track	
20	TEMPO FADER	Adjust playback tempo of currently loaded track	
21	PLAY/PAUSE	Play or pause currently loaded track	Stutter play
22	CUE	Set/play from temporary cue	
23	CUE MIX	Adjust Cue Mix	
24	CROSSFADER	Fade audio between channels	
25	CUE GAIN	Adjust headphone volume	
26	CHANNEL FADER	Adjust channel volume	
27	SYNC	SYNC On	SYNC Off
28	PLATTER DISPLAY	Shows track and deck information	


serato



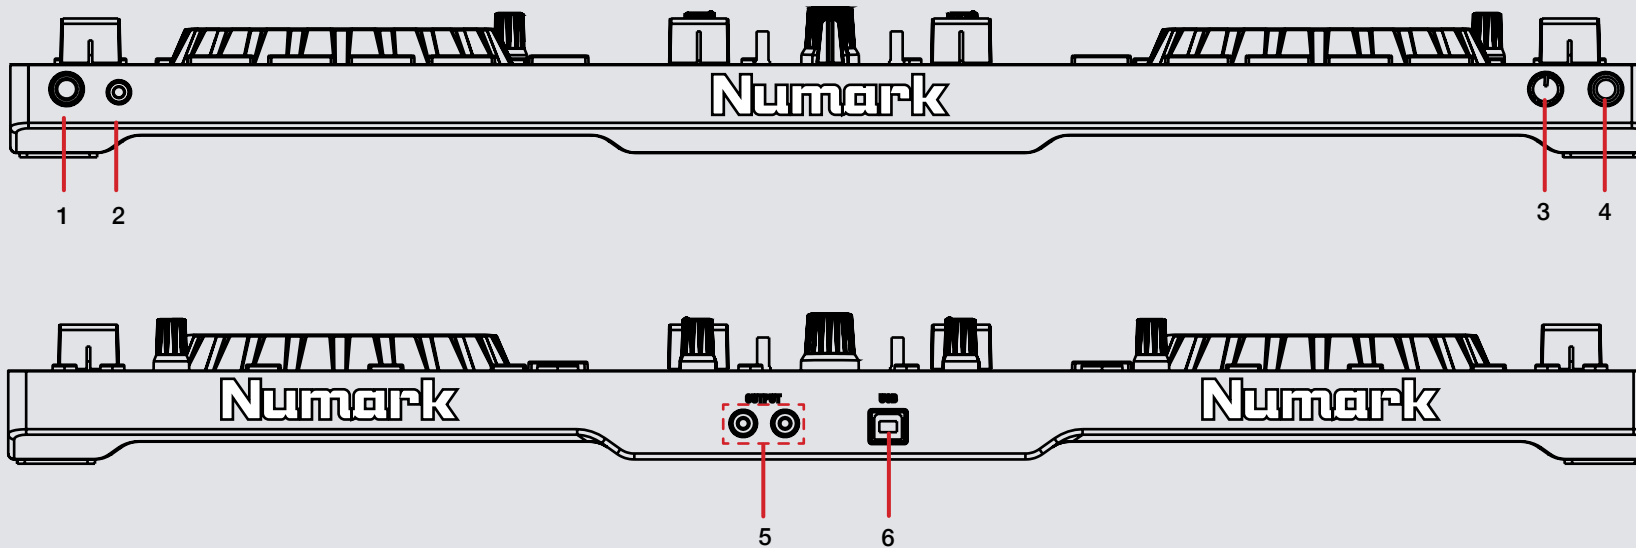

#	Numark Mixtrack Platinum	Function
1	1/4" HEADPHONES	Connect your 1/4" headphones to this output for cueing
2	1/8" HEADPHONES	Connect your 1/8" headphones to this output for cueing
3	MIC GAIN	Adjust the input volume of the Mic
4	MIC	Connect an TRS or 1/4" jack microphone to this input
5	MASTER RCA OUTPUT	Use standard RCA cables to connect this output to a speaker or powered monitors
6	USB	Connect USB cable to this port from computer

Performance Pads

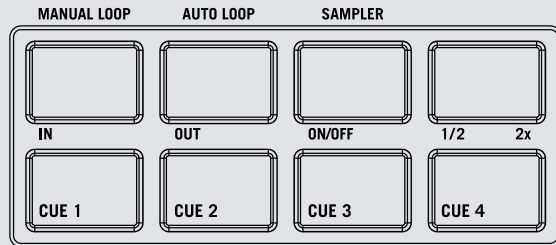


The bottom row of pads is dedicated to Cue Points:

- **CUES 1-4:** Pressing the bottom 4 pads will add and play up to 4 Cue Points. Holding **SHIFT** and pressing a pad will delete the specific Cue Points.



The top row of performance pads have different modes you can select. They are **Manual Loop mode**, **Auto Loop mode** and **Sampler mode**. Hold the **PAD MODE** button and press pads 1-3 to enable each performance pad mode.

- **AUTO 1/Manual Loop mode:** Pressing pad 1 will start and set a Manual Loop In point, pad 2 will set the Loop Out point and pads 3 and 4 will turn the Loop On/Off and Retrigger the loop.
- **AUTO 2/Auto Loop mode:** When pressing pads 1-4 you can activate Auto Loops of different sizes. Hold Shift and press pads 1-4 to enable Loop Rolls at 1/16, 1/8, 1/4 and 1/2 sizes.
- **AUTO 3/Sampler Mode:** Pads 1-4 will trigger samples loaded in slots 1-4 of your Sample Banks. Holding **SHIFT** and pressing pads 1-4 will stop the sample playing. When a sample slot is empty, pressing the pads 1-4 will load the currently selected track in library to the corresponding sample slot.

DJ-FX

The DJ-FX in Serato DJ are powered by iZotope™. Click the FX tab  to open the FX panel. Select either 1, 2 or M to assign the selected effect bank to a deck or Master Output.

There are two available modes in the DJ-FX. Single FX Mode allows you to select one effect per FX bank, and has multiple parameters that can be adjusted. Multi FX Mode allows you to select up to three effects per FX bank, and adjust only one parameter, the FX Depth. The same effects available in Single FX mode are available in Multi FX mode, as well some additional presets.

You can select between the two FX modes by clicking either the Single FX mode button  or Multi FX mode button  in the software.

Mixtrack Platinum Control	Single FX Mode	Multi FX Mode	Shift
FX 1	Turn FX slot On	Turn FX slot 1 On	Select next FX in slot (Multi FX only)
FX 2	Adjust FX parameter 1	Turn FX slot 2 On	Select next FX in slot (Multi) FX only
FX 3	Adjust FX parameter 2	Turn FX slot 3 On	Select next FX in slot (Multi FX only)
TAP	Tap DJ-FX tempo	Tap DJ-FX tempo	Change FX mode (Single/Multi)
BEATS	Adjust beats timing multiplier	Adjust beats timing multiplier	N/A
TOUCH STRIP	Adjust FX depth	Adjust FX depth	Skip search track

MIDI

The MIDI feature in Serato DJ provides the ability to remap Serato DJ software functions to your primary Serato DJ controller, interface or mixer. You can also assign controls to a secondary MIDI controller to further enhance your performance.

[For more information on MIDI mapping with Serato DJ click here.](#)

To remap your supported Serato DJ device, open the **SETUP** screen and click the **MIDI** tab. If your Serato DJ device supports hardware remapping it will show up in the **MIDI Devices** list at the top.

Select your connected device from the MIDI Devices list and make sure the “Allow Serato Hardware Remapping” option is checked.

Allow Serato Hardware Remapping

Once checked, the MIDI assign button at the top of the screen will become available for you to start remapping.


MIDI


You can save, edit or delete MIDI presets in the **MIDI** tab of the **SETUP** screen. Clicking ‘**Restore Defaults**’ will erase any custom mappings for all connected devices and revert their functions back to default.

[Download the Serato DJ software manual for further information.](#)

NOTE: Official Serato Accessories do not currently support user remapping. Hardware features that cannot be remapped at this stage are Jogwheels/ Platters, Input Switches, Shift buttons and Performance Pad Mode buttons. Re-mapping any pad(s) in Hot Cue mode will also re-map the same pad in Saved Flip mode and vice versa.

Using the Tool Tips

Click on the  icon to enable Tool Tips. This is located in between the MIDI and setup button in the top right hand corner of the screen. Tool Tips provide a handy way to learn the various features of Serato DJ.

Move the mouse over a section of the screen to bring up a context sensitive tool tip. Holding the mouse over the  button with Tool Tips turned on will show you a list of all keyboard shortcuts.

For more information about how to use Serato DJ, please go to our website www.serato.com or refer to the Serato DJ Software Manual. For more information on your controller, please refer to the hardware manual.

For further help, please contact support@serato.com or go to www.serato.com/support

serato

