



Reloop RP8000 MK2

Quick-Start Guide

Setup

Serato Software

The Reloop RP8000 MK2 is a “Serato DJ Pro official accessory”, meaning it works with Serato DJ Pro out of the box, but requires additional primary hardware connected, that falls under the Serato DJ Pro hardware unlocked or Paid upgrade to Serato DJ Pro categories.

Some features of the RP8000 MK2 are not specific to Serato DJ Pro, and are not detailed in this guide. Refer to Reloop’s documentation for more information: www.reloop.com

Please ensure you have the latest version of Serato DJ Pro installed:
[Click here to download Serato DJ Pro](#)


Driver Software

The Reloop RP8000 MK2 does not require manufacturer specific drivers on Mac or Windows operating systems, and is plug & play with Serato DJ Pro.

To assign your RP8000 MK2 to a deck:


1. Connect your RP8000 MK2 and your Serato primary hardware via their respective USB connections, and launch Serato DJ Pro.
2. Push the NAV encoder in, and hold it for 5-10 seconds, until CH-x (x=1, 2, 3, or 4) flashes in the LED display.
3. Turn the NAV encoder to select the deck you wish to assign, and then press it in again to confirm your selection. The LED display will flash rapidly to indicate your selection has been confirmed.
4. Press and hold the NAV encoder in, to reassign a deck, or repeat the process above to connect additional RP8000 MK2's.

Overview

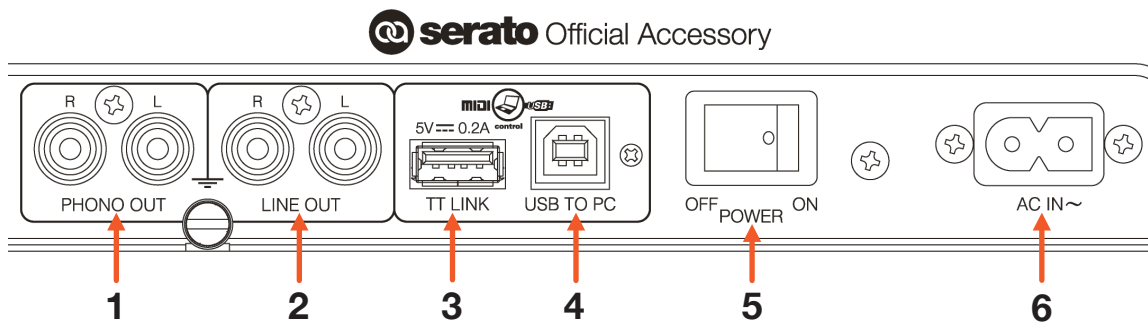

#	RP8000 MK2 CONTROL	FUNCTION
1	PHONO OUT	Connect RCA cables to Phono input on mixer
2	LINE OUT	Connect RCA cables to Line input on mixer
3	TT LINK	Connect secondary RP-8000MK2
4	USB TO PC	Connect USB cable to PC
5	POWER ON/OFF	Turn device power on/off
6	AC IN	Connect AC adapter


Overview

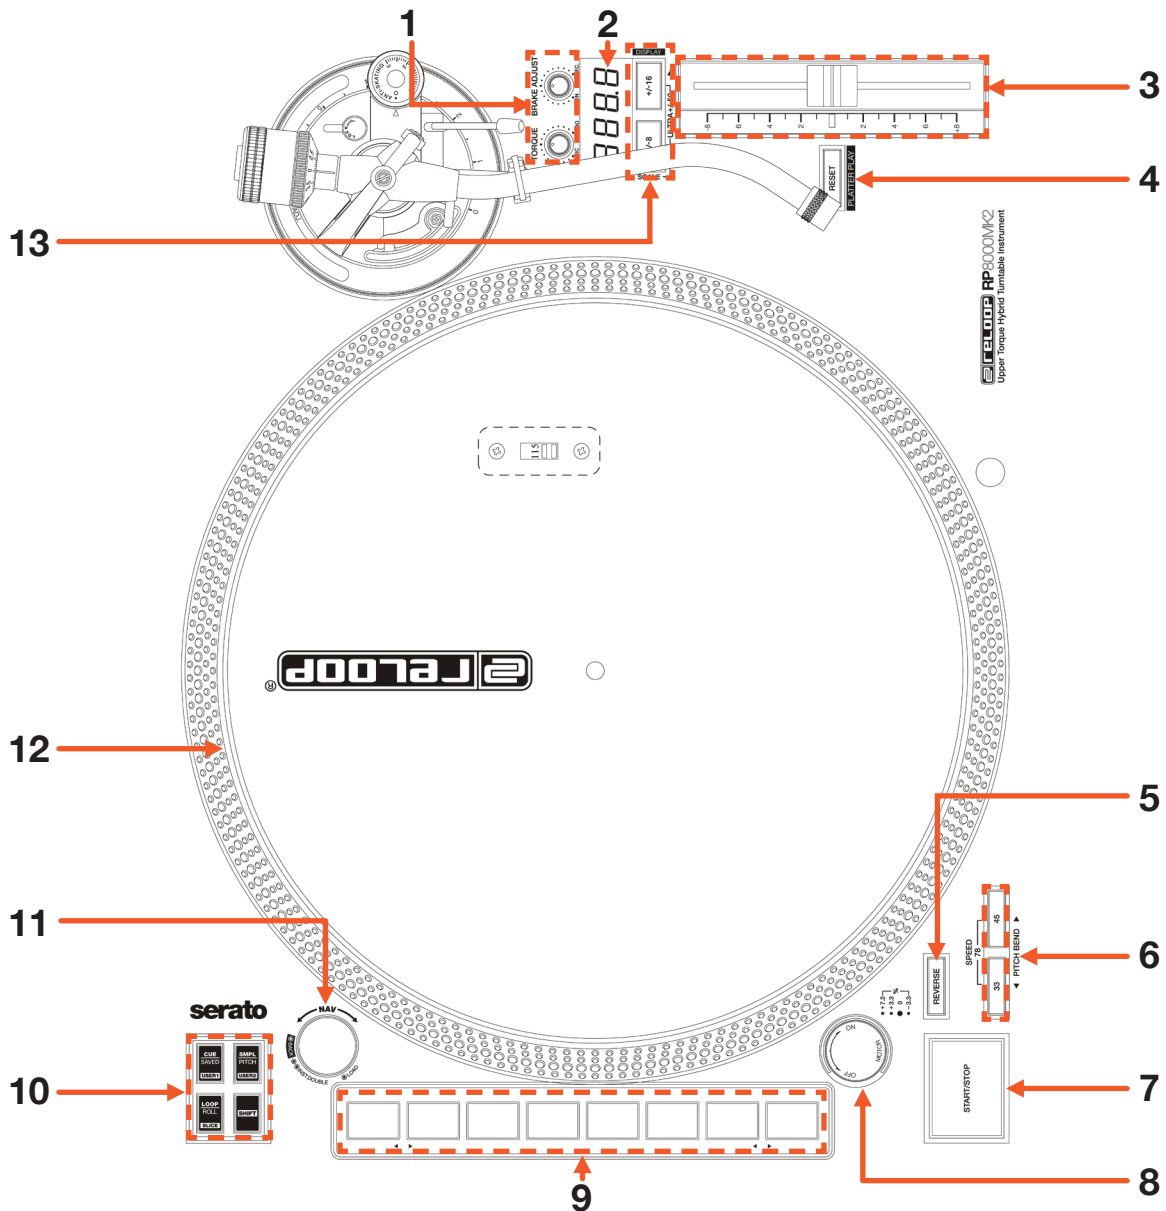

#	RP8000 MK2 CONTROL	FUNCTION
1	TORQUE / BRAKE ADJUST	Adjust platter torque / Adjust braking speed
2	LED DISPLAY	Displays pitch value
3	TEMPO SLIDER	Adjust tempo/pitch
4	RESET	Reset pitch to 0%
5	REVERSE	Toggle reverse platter direction
6	33 / 45 RPM	Toggle between 33 & 45 rpm
7	START / STOP	Press to start & stop platter
8	MOTOR ON / OFF	Turn on or off device
9	PERFORMANCE PADS	SEE PERFORMANCE PADS FOR MORE INFORMATION
10	PERFORMANCE PAD MODES	SEE PERFORMANCE PADS FOR MORE INFORMATION / SHIFT Modifier
11	NAV	Turn for library scroll / Press to load track to deck / Shift & press to toggle library & crates / Double press to instant double / Press & hold for 3 secs to select deck assign
12	PLATTER	Turn to manipulate platter
13	PITCH RANGE	Toggle pitch range for platter pitch adjustment

Performance Pads

The Reloop RP8000 MK2 has 8 RGB performance pads that can be used in one of 9 performance pad modes, and 2 user pad modes.

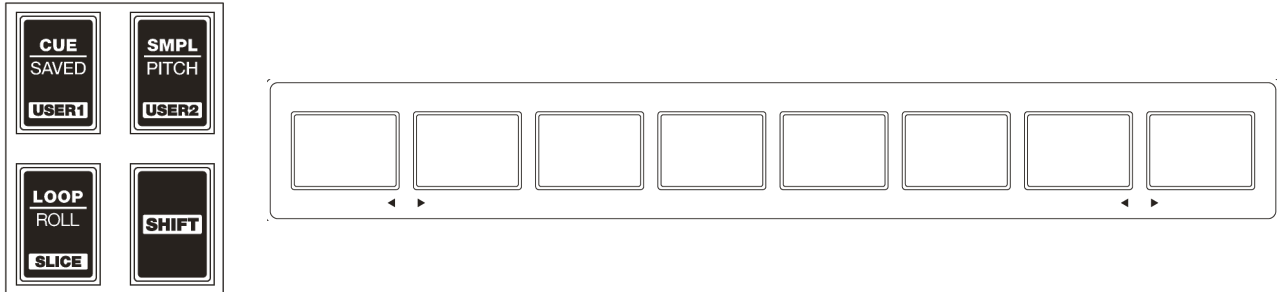

CUE mode: Pads 1-8 trigger Serato DJ Pro Cue points, and if no Cue point is present on that slot/pad, pressing that pad will set a Cue point. Holding SHIFT while pressing a pad will clear the Cue point from that pad/slot.

SAVED LOOP mode: Press the CUE mode button twice to enter SAVED LOOP mode. In this mode, pressing pads 1-8 in this mode will trigger saved loops or save the current activate loop to the respective pad/slot. Holding SHIFT while pressing a pad will re-trigger (or reloop) the respective saved loop.

USER mode 1: Hold SHIFT while pressing the CUE mode button to enter USER mode 1, a user MIDI-mappable layer. Refer to the [MIDI Mapping with Serato DJ Pro](#) article for further information on mapping.

SAMPLER mode: Press pads 1-8 to trigger samples loaded into the Serato DJ Pro Sampler. Hold SHIFT while pressing a pad to stop the sample playback once triggered, or load a sample to the respective Sampler slot if no sample is loaded.

PITCH mode: Press the SAMPLER mode button twice to enter PITCH PLAY mode. PITCH PLAY mode allows you to play CUE points at variable pitch ranges but requires the Serato Pitch 'n Time DJ expansion pack activated, see the PITCH PLAY section for more information.

USER mode 2: Hold SHIFT while pressing the CUE mode button to enter USER mode 2, a user MIDI-mappable layer. Refer to the [MIDI Mapping with Serato DJ Pro](#) article for further information on mapping.

LOOP mode: Pads 1-8 trigger autoloops at pre-determined sizes. Use the 'Shift Autoloop range' controls in Serato DJ Pro to change the 8 selected loop size options.

ROLL mode: Press the LOOP mode button twice to enter Loop Roll mode. In this mode holding pads 1-8 activates a loop roll of varying sizes. Release the pad to exit the Loop Roll. Use the 'Shift Autoloop range' controls in Serato DJ Pro to change the 8 selected loop size options.

SLICER mode: Press the LOOP mode button with SHIFT held to enter Slicer mode. In this mode a specified range (or domain) is divided into eight equal sections, and these eight sliced sections are assigned to the respective performance pads (1-8), and can be triggered by pressing them. The domain shifts as the track duration elapses.

SLICER LOOP mode: Press the LOOP mode button twice with SHIFT held to enter Slicer mode. Same as Slicer mode, but uses a fixed Slicer Domain or "loop".

Pitch Play

Holding SHIFT and pressing the SAMPLER performance pad mode button on the Reloop RP8000 MK2 will enable Pitch Play mode. In this mode you can play Cue Points over variable pitch ranges.

NOTE: The RP8000 MK2 is limited to a single range as denoted below, in Pitch Play mode.

Up 3/Down 4 Semitones (where 0 is the root key pad)

0	+1	+2	+3
-4	-3	-2	-1

PITCH PLAY can only pitch one Cue point at a time. To change the selected Cue, hold the SHIFT button and press a performance pad where the cue point you want to select would be (as shown in the CUES performance pad mode). While holding SHIFT, press the corresponding performance pad for:

Cue 1	Cue 2	Cue 3	Cue 4	Cue 5	Cue 6	Cue 7	Cue 8
-------	-------	-------	-------	-------	-------	-------	-------

The selected cue point defaults to Cue Point 1 on track load, even if instant doubled. If a pad with no cue point is selected, then a new cue point will be created. Deleting a cue point however, is not possible in PITCH PLAY mode.

NOTE: Pitch Play mode is available once the Pitch 'n Time DJ Expansion Pack has been activated in the MY SERATO window. Make sure "Enable Pitch 'n Time DJ" is checked in the Expansion Pack tab of the SETUP screen.

MIDI

The MIDI feature in Serato DJ Pro provides the ability to remap Serato DJ Pro software functions to your Serato official accessory.

[For more information on MIDI mapping with Serato DJ Pro click here](#)

To remap your supported Serato official accessory, open the SETUP screen and click the MIDI tab. If your Serato device supports hardware remapping, it will show up in the MIDI Devices list at the top.

Select your connected device from the MIDI Devices list and make sure the “Allow Serato Hardware Remapping” option is checked.

Allow Serato Hardware Remapping

Once checked, the MIDI assign button at the top of the screen will become available for you to start remapping.

You can save, edit or delete MIDI presets in the MIDI tab of the SETUP screen. Clicking ‘Restore Defaults’ will erase any custom mappings for all connected devices and revert their functions back to default.

Help

Show Tooltips

Click on the **Help** button in the upper right-hand corner of Serato DJ Pro, then **Show tooltips** to enable tooltips. Tool tips provide a handy way to learn the various features of Serato DJ Pro.

Move the mouse over a section of the screen to bring up a context sensitive tool tip.

Watch Tutorials

Click on the **Help** button in the upper right-hand corner of Serato DJ Pro, then **Watch tutorials** to launch your default internet browser and watch tutorials, to help you get familiar with Serato DJ Pro.

Get Support

Click on the **Help** button in the upper right-hand corner of Serato DJ Pro, then **Get support** to launch your default internet browser and navigate to the Serato DJ Pro knowledge base, where you can find helpful articles and guides on Serato DJ Pro. Alternatively, type in the **Search help** **Go** box, with keywords, to search the Serato DJ Pro knowledge base for specific, related topics.