



Numark
MixTrack Pro FX
Quick-Start Guide

Setup

Serato Software

The Numark MixTrack Pro FX is a “Serato DJ Lite hardware unlocked” device, meaning it works with Serato DJ Lite out of the box.

It is also a “paid upgrade to Serato DJ Pro device”, meaning it requires the purchase & activation of a Serato DJ Pro license, in order to be used with Serato DJ Pro.

You can also trial Serato DJ Pro, for up to 14-days.

[Click here to find out more about buying or activating Serato DJ Pro](#)


Please ensure you have the latest version of Serato DJ Lite installed:

[Click here to download Serato DJ Lite](#)

Driver Software


The Numark MixTrack Pro FX does not require manufacturer specific drivers on either Mac & Windows operating systems. Simply connect the device to your PC, and launch the latest version of Serato DJ Lite.

Overview

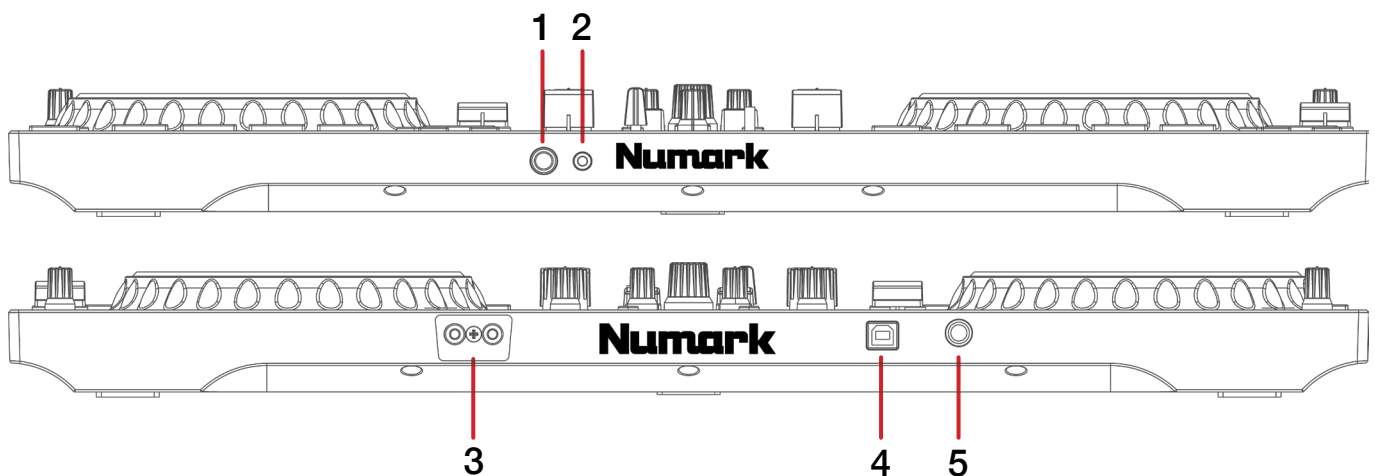

#	MixTrack Pro FX CONTROL	FUNCTION
1	1/4" HEADPHONE JACK	Connect your 1/4" headphones to this output for cueing
2	1/8" HEADPHONE JACK	Connect your 1/8" headphones to this output for cueing
3	MASTER RCA OUTPUT	Use RCA cables to connect this output to a speaker or powered monitors
4	USB	Connect USB cable to this port from computer
5	MIC	Load selected track to deck 1

Overview

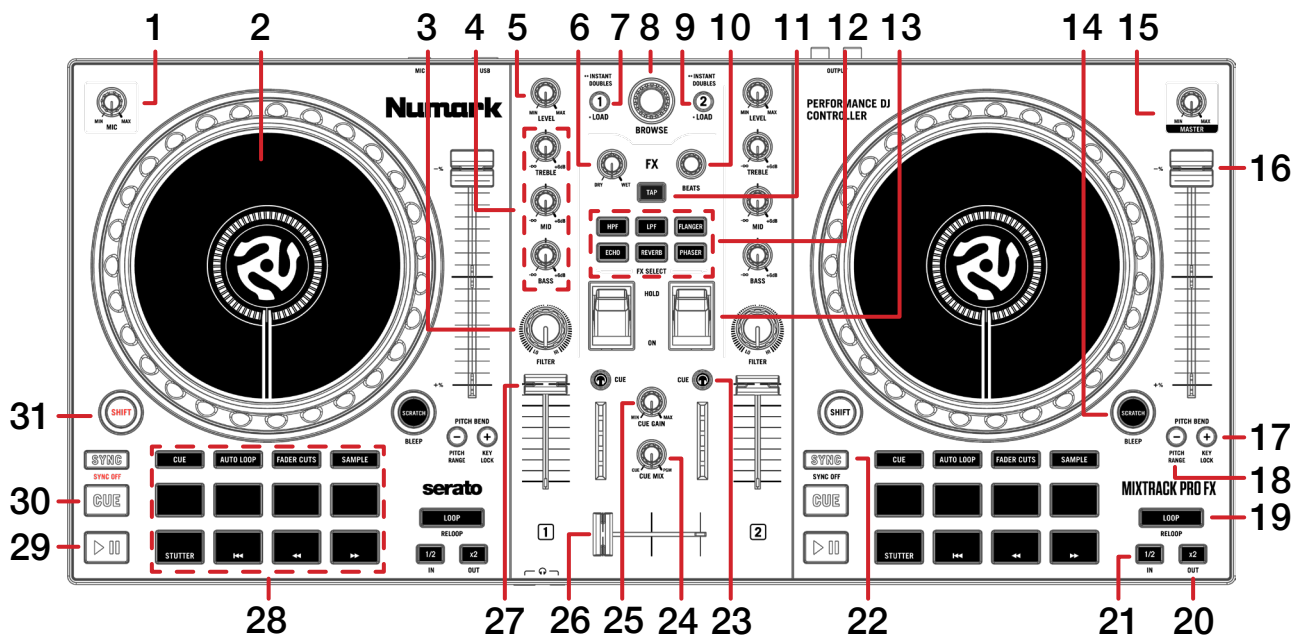


#	MixTrack Pro FX CONTROL	FUNCTION	Shift
1	MIC VOLUME	Adjust the volume of the Mic	-
2	JOG WHEEL	Control the waveform within Serato DJ Pro	Platter skip
3	HP/LP FILTER	Channel High and Low pass filter	-
4	CHANNEL EQ	Adjust channel EQ	-
5	CHANNEL LEVEL	Adjust channel gain	-
6	FX DRY/WET	Adjust FX depth parameter	-
7	LOAD CHANNEL 1	Load currently highlighted track to deck 1	-
8	BROWSE	Scroll library or crate list/Library back	Fast scroll/Add to Prepare crate
9	LOAD CHANNEL 2	Load currently highlighted track to deck 2	-
10	BEATS MULTIPLIER	Adjust beats multiplier timing	-
11	TAP FX TEMPO	Tap to get FX BPM value	-
12	FX SELECT	Loads selected FX to slot 1 (HPF,LPF,ECHO,REVERB,FLANGER, PHASER)	FX slot 1 select
13	FX ON/OFF	Turn selected FX on/off	-
14	SCRATCH	Turn scratch mode on/off for the respective plater	Bleep/Censor
15	MASTER VOLUME	Adjust the master output volume	-
16	TEMPO SLIDER	Adjust playback tempo of the currently loaded track	Ignore tempo slider
17	PITCH BEND +	Pitch bend forward	Toggle Key Lock
18	PITCH BEND -	Pitch bend backward	Increase pitch range

#	MixTrack Pro FX CONTROL	FUNCTION	SHIFT
19	LOOP ON/OFF	Enable the selected auto loop value	Reloop/Exit
20	LOOP DOUBLE (X2)	Double the size of the activated loop	Manual Loop Out
21	LOOP HALF (1/2)	Half the size of the activated loop	Manual Loop In
22	SYNC	Turn Sync on for the respective deck	Turn off Sync
23	PFL CUE	Enable to monitor the channel through the headphones	-
24	CUE MIX	Adjust the level of cue and master heard in the headphones	-
25	CUE GAIN	Adjust the volume of the headphones	-
26	CROSSFADER	Fade audio between the channels	-
27	CHANNEL FADER	Adjust channel volume	Fader start
28	PERFORMANCE PADS	SEE PERFORMANCE PAD SECTION BELOW FOR MORE INFORMATION	-
29	PLAY/PAUSE	Play or pause the currently loaded track	Stutter Play
30	CUE	Set/play from a temporary cue point	Previous Track
31	SHIFT	Used with other controls that have shift modifier functions	-

Performance Pads

The Numark MixTrack Platinum FX comes with 4 performance pads, that can be used across 4 different performance pad modes. These consist of:

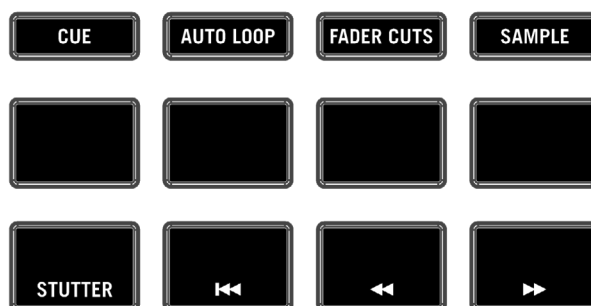

HOT CUE mode: Pads 1-4 trigger Serato DJ Lite Cue points, and if no Cue point is present on that slot/pad, pressing that pad will set a Cue point. Holding down the **SHIFT** button while pressing a pad will delete the Cue point from the respective pad/slot.

AUTO LOOP mode: Pads 1-4 trigger triggers an autoloop of variable sizes. Use the loop selection area in the Serato DJ Pro user interface, to influence the 4 available autoloop sizes.

FADER CUTS mode: Applies Fader Cuts to track on corresponding deck. See the Numark Mixtrack Pro FX Manual for more information

SAMPLE mode: Press pads 1-4 in this mode to trigger samples loaded into the Serato DJ Lite Sampler.

PADS 5-8 (In Order): Stutter, Previous Track, Skip Backwards Skip Forward.

Help

Show Tooltips

Click on the **Help** button in the upper right-hand corner of Serato DJ Lite, then **Show tooltips** to enable tooltips. Tool tips provide a handy way to learn the various features of Serato DJ Lite.

Move the mouse over a section of the screen to bring up a context sensitive tool tip.

Watch Tutorials

Click on the **Help** button in the upper right-hand corner of Serato DJ Lite, then **Watch tutorials** to launch your default internet browser and watch tutorials, to help you get familiar with Serato DJ Lite.

Get Support

Click on the **Help** button in the upper right-hand corner of Serato DJ Lite, then **Get support** to launch your default internet browser and navigate to the Serato DJ Lite knowledge base, where you can find helpful articles and guides on Serato DJ Lite. Alternatively, type in the **Go** box, with keywords, to search the Serato DJ Lite knowledge base for specific, related topics.