



Reloop
Ready
Quick-Start Guide

Setup

Serato Software

The Reloop Ready is a “Serato DJ Lite hardware unlocked” device, meaning it works with Serato DJ Lite out of the box.

It is also a “paid upgrade to Serato DJ Pro device”, meaning it requires the purchase & activation of a Serato DJ Pro license, in order to be used with Serato DJ Pro.

You can also trial Serato DJ Pro, for up to 14-days.

[Click here to find out more about buying or activating Serato DJ Pro](#)

 
Please ensure you have the latest version of Serato DJ Lite installed:

[Click here to download Serato DJ Lite](#)

Driver Software


The Reloop Ready does not require manufacturer specific drivers on Mac computers. Windows computers require a device driver to be installed. This can be downloaded from Reloop’s website [here](#).

Overview

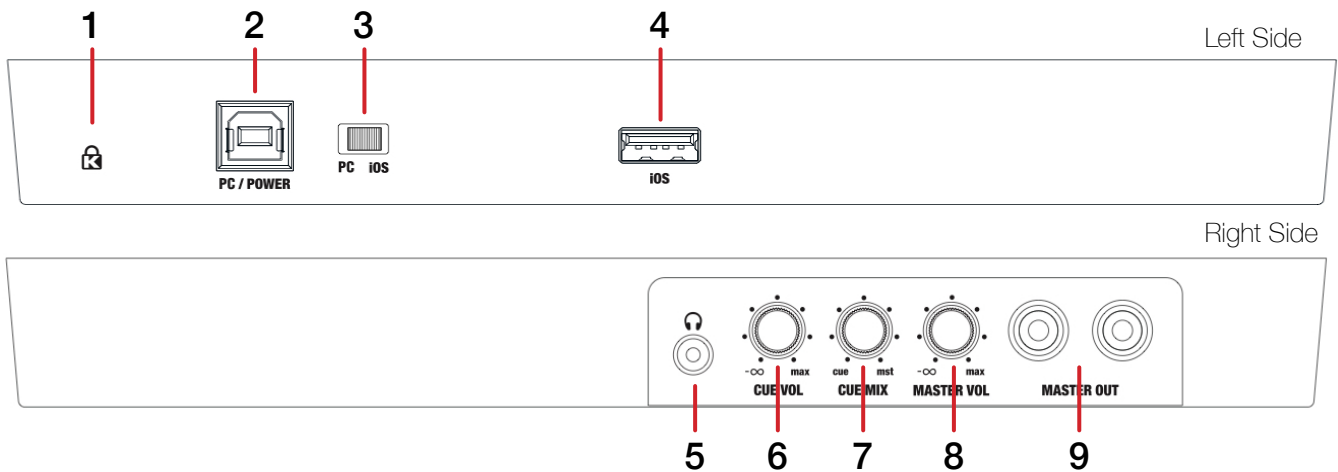

#	Reloop Ready CONTROL	FUNCTION
1	KENSINGTON LOCK	Connect your 1/4" headphones to this output for cueing
2	PC USB	Connect USB cable to this port from computer
3	PC/IOS SWITCH	Switch between PC (Serato) and IOS device
4	IOS USB	Used for IOS connection
5	1/8" HEADPHONE JACK	Connect your 1/8" headphones to this output for cueing
6	CUE VOL	Adjust the volume of the headphones
7	CUE MIX	Adjust the level of cue and master heard in the headphones
8	MASTER VOL	Adjust the master output volume
9	MASTER OUTPUT	Use RCA cables to connect this output to a speaker or powered monitors

 Overview

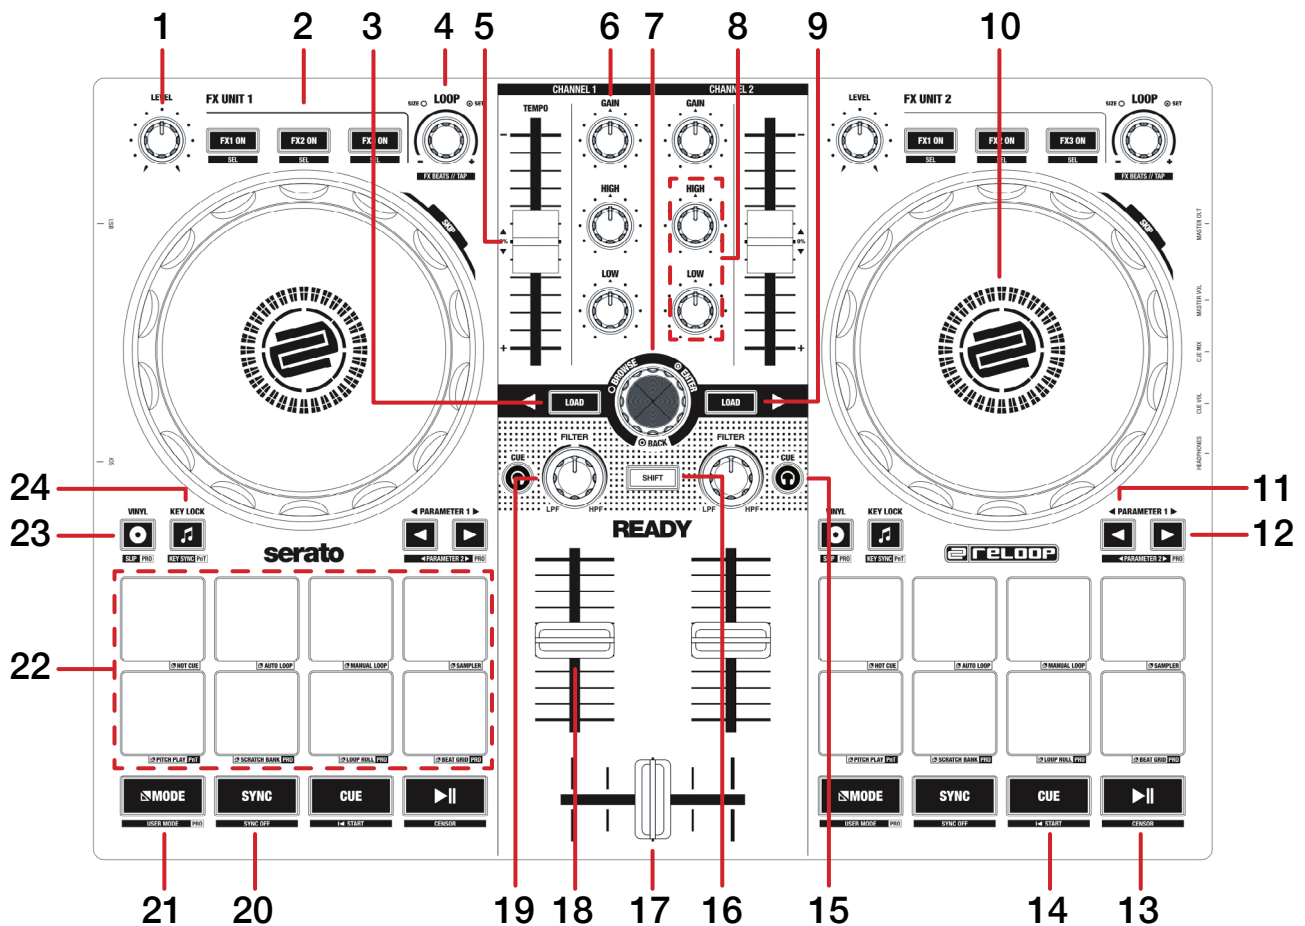


#	Ready CONTROL	FUNCTION	Shift
1	FX LEVEL	Adjust FX depth parameter for FX 1, 2 & 3	-
2	FX UNIT	Enable FX 1, 2 & 3	FX Select
3	LOAD CHANNEL 1	Load currently highlighted track to deck 1	-
4	LOOP	Scroll to choose size of loop, press to activate loop	FX Beat Select/Tap
5	TEMPO SLIDER	Adjust playback tempo of current loaded track	Ignore tempo slider
6	CHANNEL GAIN	Adjust channel gain	-
7	BROWSE	Scroll library or crate list/Library back	Fast scroll
8	CHANNEL EQ	Adjust channel EQ	-
9	LOAD CHANNEL 2	Load currently highlighted track to deck 2	-
10	JOG WHEEL	Control the waveform within Serato DJ Pro	Platter skip
11	PARAMETER LEFT	Adjust the pad mode parameters	-
12	PARAMETER RIGHT	Adjust the pad mode parameters	-
13	PLAY	Play or pause the currently loaded track	Censor
14	CUE	Set/play from a temporary cue point	Jump to start
15	HEADPHONE CUE	Enable to monitor the channel through the headphones	Adjust Tempo Range

Overview

#	Ready CONTROL	FUNCTION	SHIFT
16	SHIFT	Used with other controls that have shift modifier functions	-
17	CROSSFADER	Fade audio between the channels	-
18	CHANNEL FADER	Adjust channel volume	-
19	CHANNEL FILTER	High and Low pass channel filter	-
20	SYNC	Turn Sync on for the respective deck	Turn off Sync
21	MODE	Hold and press in combination with a pad to select a pad mode	-
22	PERFORMANCE PADS	SEE PERFORMANCE PAD SECTION BELOW FOR MORE INFORMATION	-
23	VINYL	Turn vinyl mode on/off for the respective plater	-
24	KEYLOCK	Enable and disable Key Lock for deck	-

Performance Pads

 The Reloop Ready can make use of 4 performance pads in Serato DJ Lite. These pads can be used across 4 different performance pad modes. Pads 5 - 8 are assigned to transport controls. These consist of:

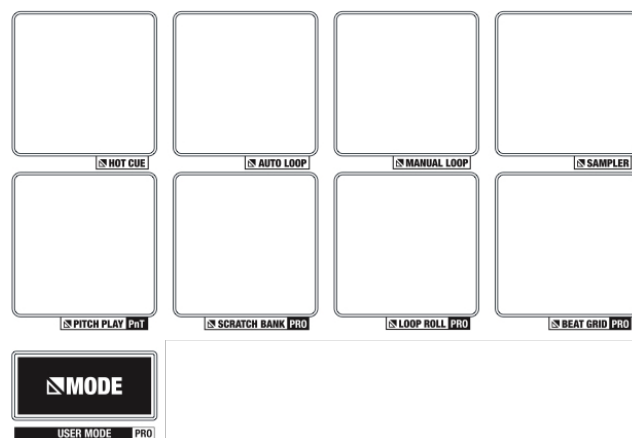

HOT CUE mode: Hold the **MODE** button and press **PAD 1** to select HOT CUE mode. In this mode pads 1-4 trigger Serato DJ Lite Cue points, and if no Cue point is present on that slot/pad, pressing that pad will set a Cue point. Holding down the **SHIFT** button while pressing a pad will delete the Cue point from the respective pad/slot.

AUTO LOOP mode: Hold the **MODE** button and press **PAD 2** to select AUTO LOOP mode. Pads 1-4 trigger an autoloop of variable sizes. Use the **PARAMETER** buttons to shift the loop left or right.

MANUAL LOOP mode: Hold the **MODE** button and press **PAD 3** to select MANUAL LOOP mode. In this mode, **PAD 1** sets the in point and **PAD 2** sets the out point. **PAD 3** will Enable/Disable the loop and **PAD 4** will trigger Reloop.

SAMPLER mode: Hold the **MODE** button and press **PAD 4** to select SAMPLER mode. Press pads 1-4 in this mode to trigger samples loaded into the Serato DJ Pro Sampler.

PADS 5-8 (In Order): Reverse, Rewind, Fast Forward, Stutter Play.

Help

Show Tooltips

Click on the **Help** button in the upper right-hand corner of Serato DJ Lite, then **Show tooltips** to enable tooltips. Tool tips provide a handy way to learn the various features of Serato DJ Lite.

Move the mouse over a section of the screen to bring up a context sensitive tool tip.

Watch Tutorials

Click on the **Help** button in the upper right-hand corner of Serato DJ Lite, then **Watch tutorials** to launch your default internet browser and watch tutorials, to help you get familiar with Serato DJ Lite.

Get Support

Click on the **Help** button in the upper right-hand corner of Serato DJ Lite, then **Get support** to launch your default internet browser and navigate to the Serato DJ Lite knowledge base, where you can find helpful articles and guides on Serato DJ Lite. Alternatively, type in the **Go** box, with keywords, to search the Serato DJ Lite knowledge base for specific, related topics.