



Numark Party Mix 2 Quick-Start Guide

Setup

Serato Software

The Numark Party Mix 2 is a “Serato DJ Lite hardware unlocked” device, meaning it works with Serato DJ Lite out of the box.

It is also a “paid upgrade to Serato DJ Pro device”, meaning it requires the purchase & activation of a Serato DJ Pro license, in order to be used with Serato DJ Pro.

You can also trial Serato DJ Pro, for up to 14-days.

[Click here to find out more about buying or activating Serato DJ Pro](#)

Please ensure you have the latest version of Serato DJ Lite installed:

[Click here to download Serato DJ Lite](#)

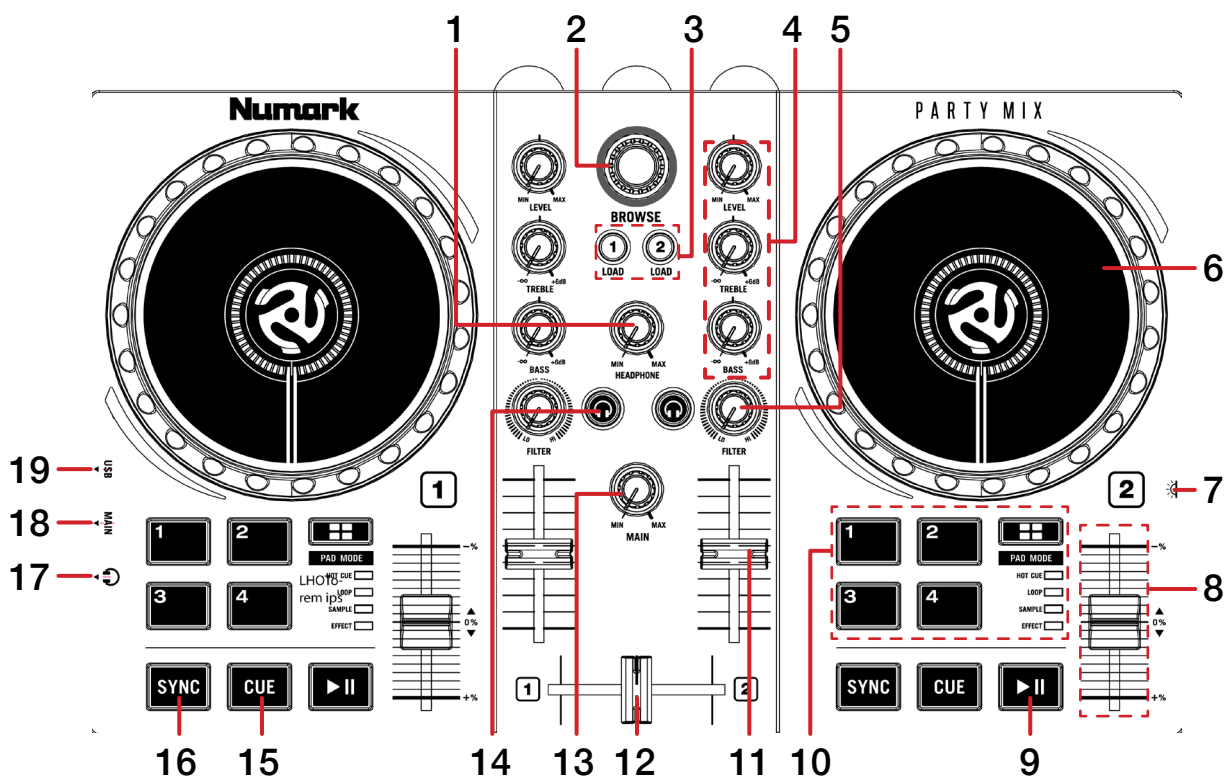 
Driver Software

The Numark Party Mix 2 does not require manufacturer specific drivers on macOS operating systems, however they are required on Windows, and can be found in the link below:

[Numark Support](#)

Install any relevant drivers, then connect the device to your computer, and launch the latest version of Serato DJ Lite.

Overview



#	NUMARK PARTY MIX 2 CONTROL	FUNCTION
1	HEADPHONE	Adjust headphone output level
2	BROWSE	Library Scroll. Press to toggle between track and crate selection
3	LOAD 1 / 2	Load highlighted track to respective deck. Double press to Instant Double
4	EQ / GAIN	Adjust channel EQ (treble & bass) and channel gain (level)
5	FILTER	Low & High pass combo filter (per channel)
6	JOG WHEEL	Control waveform within Serato DJ in vinyl mode, or pitch bend
7	PARTY BALL LIGHTS	SEE LIGHTS FOR MORE INFORMATION
8	TEMPO SLIDER	Adjust tempo/pitch
9	PLAY / PAUSE	Toggles Play/Pause on selected deck
10	PERFORMANCE PADS	SEE PERFORMANCE PADS FOR MORE INFORMATION
11	CHANNEL FADER	Adjust channel volume
12	CROSSFADER	Crossfade audio between channel 1-2
13	MAIN	Adjust Master output level
14	CHANNEL CUE	Press to cue channel for monitoring in headphones
15	CUE	Cues from temp cue point/Set temp cue point
16	SYNC	Press to turn SYNC on. Hold the PAD MODE button while pressing to turn SYNC off.
17	HEADPHONE OUT	Output to headphones (3.5mm or 1/8")
18	MAIN OUT	Connect 3.5mm or 1/8" output to speakers
19	USB	Connect USB data cable to PC

Performance Pads

The Numark Party Mix 2 comes with 4 performance pads, that can be used across 4 different performance pad modes.

Repeatedly pressing the PAD MODE button will cycle through the available pad modes, lighting up that pad modes respective LED to indicate a selection.



These consist of:


CUE mode: Pads 1-4 trigger Serato DJ Lite Cue points, and if no Cue point is present on that slot/pad, pressing that pad will set a Cue point.

LOOP mode: Pads 1-4 trigger triggers an autoloop of variable sizes. Use the loop selection area in the Serato DJ Lite user interface, to influence the 4 available autoloop sizes.

SAMPLER mode: Press pads 1-4 to trigger samples loaded into the Serato DJ Lite Sampler.

EFFECT mode: Press pads 1-4 to trigger FX via multi & single FX modes.


DJ-FX

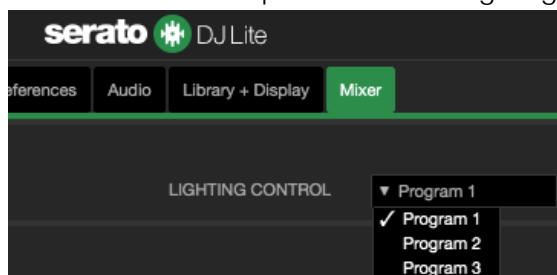 
The DJ-FX in Serato DJ Lite are powered by iZotope™. Click the FX button  to open the FX panel.

Serato DJ Lite's Multi FX Mode allows you to select up to three effects per FX bank, and adjust one parameter, the FX Depth.

Party Mix 2 Control	Multi FX mode
PAD 1	Hold & release for Slot 1 Effect On/Off
PAD 2	Hold & release for Slot 2 Effect On/Off
PAD 3	Hold & release for Slot 3 Effect On/Off
PAD 4	Cycle Beats multiplier

Lights

The Numark Party Mix 2 comes equipped with Party Ball lights that are reactive to Serato software. Press the  button on the left side of the unit repeatedly, to cycle through the Party Ball modes. In compatible modes, lights respond to the RGB setting from Serato software, and 3 further Programs can be selected via Setup --> Mixer --> Lighting Control (see image below)



 
 
Program 1 turns the RGB lights on and off in a sequential order, based on the beat played.

Program 2 flashes the RGB lights rapidly in a sequential order, based on the beat played.

Program 3 illuminates all 3 RGB lights at the same time, but their intensity is determined by the Master output level.

 
 
Help

Show Tooltips

 
 
 
Click on the  button in the upper right-hand corner of Serato DJ Lite, then  to enable tooltips. Tool tips provide a handy way to learn the various features of Serato DJ Lite.

Move the mouse over a section of the screen to bring up a context sensitive tool tip.

Watch Tutorials

Click on the  button in the upper right-hand corner of Serato DJ Lite, then  to launch your default internet browser and watch tutorials, to help you get familiar with Serato DJ Lite.

Get Support

Click on the  button in the upper right-hand corner of Serato DJ Lite, then  to launch your default internet browser and navigate to the Serato DJ Lite knowledge base, where you can find helpful articles and guides on Serato DJ Lite. Alternatively, type in the  box, with keywords, to search the Serato DJ Lite knowledge base for specific, related topics.